



OPERATING INSTRUCTIONS FOR BBRAUN INJECTOMAT SYRINGE PUMP

BBRAUN INFUSION AND SYRINGE PUMP COMMMON INSTRCTIONS

- Make sure the unit is firmly in position. This applies in particular to use with infusion stands or wall rails.
- Always check the audible and visual alarms prior to use.
- Patient connection should only be made when the device is switched on.
- Interrupt connection when changing syringe to avoid danger of incorrect dosage.
- Make sure the syringe/tubings is correctly positioned.
- Whenever the inputs are made, value displayed is to be compared to value entered. Do not use unit unless the values coincide.
- Make sure that there are no kinks in tubing; ensure unimpeded flow.
- Make exclusive use of disposables. Replace after 24 hours.
- Use only compatible combinations of equipment, accessories, working parts and disposables.
- The infusion lines should be placed in such a way that the syringe cannot be pulled out of its fixation because of uncontrolled drawing.
- Cleaning should be carried out with soap and water solution.
- For disinfection use only surface disinfectants.



P.O. Bos: 48577, DUBAI, U.A.L.

Tel: 04 267 8868, Faz: 04 287 0555

P.O. Box: 457, SHARJAH, U.A.F.

Te : 06 565 8868; Faz: 06 585 8539

من ما: ۵۸۵۷۷، يعي (ارج پ ARE LEFANCES IN EDUCATED AND VERY SE

من ب 192 الشيارقة إ ع م ARE . FEAR OFF F. ADE., PITE OFF F.



E-mail: info@zulekt ahospitals.com • Wabsite: www.zpiakhahospitals.com

Overview

Function keys

The function of the 4 keys is governed by the respective situation. This is indicated in the display above. Thus, for example:

SF Call up special functions +/-Increase /Decrease

END Exit from this selection and return to normal display

Key has no function

If Iights: Press key again to confirm entry.

Display and user prompting All important data are given in plain language or can be called up.

Display with unobtrusive green light for optimum legibility. (Mains only. With battery only during unit operation.)



VOL Infusion Volume

Press key beneath VOL.

Enter volume (between 1 and 999.9 ml) and confirm entry.

TIME Infusion time

Press key beneath TIME.

Enter time (e.g.: 50 min. as 5 0 or 2 h 30 min as 2 3 0) and confirm entry.

RATE Delivery rate

Press key beneath RATE to confirm calculated rate from volume and time input.

Press key beneath RATE* (if Delights).

Syringe holder

Holds syringe in position. To remove syringe: Pull and move to the left.

SF Special functions

If released, successive call-up of: Dosage Calculation / Bolus function / Standby function / Drug selection / Occlusion pressure / Battery capacity / Data lock / Contrast / Date, Time.

Settings (Service only)

- Ward code (displayed when unit switched off)
- Range of syringes
- Range of drugs
- Deactivation of individual special functions

Only displayed with rate calculation.



P.O. Box: 48577, DUBAI, U.A.L.

Te : 04 267 8868, Faz: 04 257 0555 P.D. Box: 457, SHARJAH, IJ.A.F.

Te : 06 565 8866, Faz: 06 555 8539

مین در ۲۰۰۱ کا دیگی ایج چ ملت به ۲۰۷۸ کا داخلاتی در ۲۲۷ کا د مین ۲۰۱۱ افغارفته ایج در ملت ۲۲۰۱ د تاکین ۲۲۱۲ د ۲۵ کا

E-mail: info@zulekl ahosp tals.com • Wabsite: www.zu akhahaspitals.com





Pole clamp, back Attach to infusion stand. Fit Perfusor fm from above and engage. To release, press black button.

Keypad for input

Correction/CLEAR key Resets display to 000.0

Main switch ON/OFF Press for 2 seconds to switch off.

Remaining battery capacity
With device switched off and power lead
disconnected: Briefly press ○/⑨.
Battery capacity (and ward if envisaged)
is indicated after 3 seconds.

Suppress alarm tone for 2 min

START/STOP

Start/interruption of infusion, e.g. for altering delivery rate.

Aluminium casing Easy upkeep, drip-proof and resistant to disinfectant.

Memory-card window Scope of functions can be extended for exemple by way of a PCA memory card (please ask for information).



○ △ Alarm Indicator Lights in alarm situation.

O Operating Indicator Indicates delivery.

Battery Check Lights when using battery. Flashes with battery pre-alarm.

Mains Check Lights during mains operation. Battery is charged.

lle for easy transport Infrared interface
For operation with fluid manager system.


For operation with fluid manager system.

Potential equalisation
Connect with CF-mode.

Mains connection

Power supply

Connection for power lead.Automatic switching to battery in the event of power failure. Mains fuses directly above mains connection.

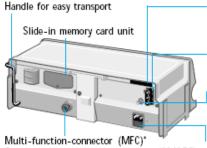

Multi-function-connector (MFC)*
Connecting for staff call, ambulances (12 V DC)
and interface for fm anaesthesia/intensive.

As of unit no. 20001. Previously separate connections for staff call and 12 V supply.



P.D. Bok: 48577, **DUBAT**, U.A.L. Tel: C4 267 8866, Faz: O4 267 0055 P.D. Bok: 457, **Sharjah**, ILA.F. Tel: C6 565 8866, Faz: O6 565 6639



E-mail: info@zutekt ahospitals.com • Wabsite: www.zg akhatraspitals.com

Operation

Start of infusion

- Ensure reliable installation
 Connect up staff call if appropriate.
- Switch on unit with ○/⊙. A short self-test is performed. Drive moves into position.
- Open syringe holder
- Insert syringe

Grip plates of syringe must be vertical and held securely by locator (see diagram). Close syringe holder.

Grip syringe

Keep key beneath << pressed. Drive advances and grips pressure plate of syringe, then release key. Type of syringe indicated must coincide with syringe inserted.

Prime

Press key beneath ON until infusion set has been primed (pressing key once = 1 ml). Then press key beneath END.

- Connect up to patient
- Set delivery rate

Values between 0.1 and 200 ml/h. Check display! Correction: Press C, enter rate again.

Choose additional settings as described below. For automatic rate calculation: Do not enter rate!

Press START

Infusion is implemented. Running symbol appears on display and green operating indicator lights.

Syringe change

To avoide incorrect dosing, always interrupt patient connection when changing syringe.

Press STOP

Green operating indicator goes out. Close patient access.

- Remove empty syringe
 Open syringe holder. Press key beneath >>,
 drive moves backwards.
- Insert new syringe Grasp plunger, vent and connect up to patient as described.
- Press START

End of Infusion

Press STOP

Green operating indicator goes out. Close patient access.

Remove syringe Open syringe holder. Press key beneath >>, drive moves backwards.

Switch off Press O/⊚ for 2 seconds.

0



P.O. Box: 48577, **DUBA**J, U.A.C. Tel: 04 267 8866, Faz: 04 267 0555 P.O. Box: 457, **SHARJAH**, U.A.F. Tel: 06 565 8866, Faz: 06 565 6539 مريد: ۲۰۰۷، ديني اروم. ملتو ، ۲۰۷۰، ۲۰۱۷ او فلاس ده ۲۰۷۰، ۲۰۷ او من د ۲۰۱۷ افغارفته او د ملتو ، ۲۰۱۷، ۱۹۵۰ و فلاس ، ۲۰۱۷ ۱۹۵۵ و د

E-mail: info@zulekt aliosp t⊴ts.com • Wabsite: www.zu akhahospitats com



Additional settings

To Change the Delivery Rate

- Press ŠTOP.
- Press C. Display is reset to 000.0.
- Enter new delivery rate.
- Press START. Infusion is implemented. (Alarm is given if there is no restart within 2 minutes)


To Change the Rate Without Interrupting the infusion (Function can be deactivated by our Service staff)

- Enter new rate.
- Press key beneath RATE. Rate is transferred to red display. Unit operates at new rate. (If new rate is not confirmed within 10 s, infusion continues at old rate)

Target Volume (Volume Pre-selection)
The target volume will be administered independent on the infused volume.

- Press key below VOL.
- ► Enter target volume via keypad and confirm with VOL (values between 0.1 and 999.9 ml). After confirming the display shows the residual volume instead of the target volume.

Note: When target-/residual volume has been administered, the pump stops and goes into alarm. Acknowledge alarm and press VOL. Clear displayed residual volume with C (in display appears ----, - ml). Confirm this with VOL or enter new target volume. To continue infusion,

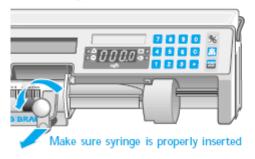

the target volume has to be displayed as ---,ml or a new target volume has to be set.

Target Time (Time Pre-selection)

Press key beneath TIME.

Enter target time via keypad and confirm with TIME (50 min. = 5 0; 2 h/30 min. = 2 3 0). After confirming instead of the target time the residual time is displayed.

Correction: Press C. Display --h --m.
 New entry.

Note: When time has been expired, the pump stops and goes into alarm. Acknowledge alarm and press TIME. Clear displayed residual time with C (in display appears --h -- m). Confirm this with TIME or enter new target time.

Rate calculation

Displayed delivery rate must be 000.0.

- Enter volume and time. The delivery rate is calculated automatically and displayed (rounded to one decimal place).
- Confirm RATE.
- Press START. Infusion is implemented.

Clear Time/Volume

- Press STOP, then key beneath VOL or TIME.
- Press C to clear.

1x: Target Vol/Time = ----,-ml / --h--m 2x: Infused Volume/Real Time = 0.0ml /00h00m

Status Request

Only when infusion is running.

- Press 1 x resp. 2 x key below INFO for actual values. The display disappears after 10 sec or after all information has been requested.
- Press x times key below INFO for displaying syringe type, battery capacity in h and min as well as hours of operation.

Set rate is automatically reduced if required for type of syringe being used.



P.D. Box: 48577, **DUBAT**, U.A.L. Te : 04 267 8866, Faz: 04 267 0555 P.D. Box: 457, **Sharjah**, U.A.F.


Te : 06 565 8866, Faz: 06 555 8539

سی سر ۱۹۸۰ کی بھی اور ہے ملک کا ۱۹۸۸ کا کا فاقعی ۱۹۵۸ کی میں میں در ۱۹۵۱ کا فقیل فقہ اور م ملک کا ۱۹۸۸ کا کا کا فقائی ۱۹۸۹ کا ۱۹۵۹ کا ۱۹۵۹

E-mail: info@gulekt ahosp tals.com • Wabsite: www.zg akhatraspitats com



Overview

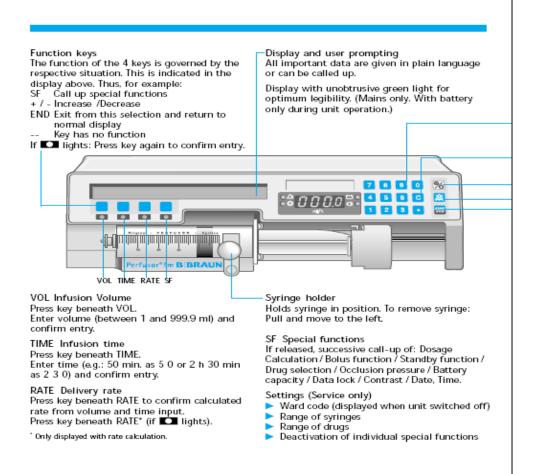



P.O. Box: 48577, **DUBA)**, U.A.L. Tel: 04 267 8866, Faz: 04 267 0055 P.O. Box: 457, **Sharjah**, U.A.C.

Te : 06 565 8866, Faz: 06 565 6539

مین (۱۹۸۷) یکی از چچ ملک (۱۹۷۷) در فلایی ۱۹۷۷ در میان (۱۹۵۷) افغازهای از چر ملک (۱۹۸۱) داد ۱. فلایی ۱۹۱۹ داده در

E-mail: info@zutekt ahosp tals.com • Wabsite: www.zu ekhaltaspitats cum





Pole clamp, back Attach to infusion stand. Fit Perfusor fm from above and engage. To release, press black button.

Keypad for input

Correction/CLEAR key Resets display to 000.0

Main switch ON/OFF Press for 2 seconds to switch off.

Remaining battery capacity
With device switched off and power lead
disconnected: Briefly press ○/●.
Battery capacity (and ward if envisaged)
is indicated after 3 seconds.

Suppress alarm tone for 2 min

START/STOP

Start/interruption of infusion, e.g. for altering delivery rate.

Aluminium casing Easy upkeep, drip-proof and resistant to disinfectant.

Memory-card window Scope of functions can be extended for exemple by way of a PCA memory card (please ask for information).



○ △ Alarm Indicator Lights in alarm situation.

Operating Indicator Indicates delivery.

O Battery Check Lights when using battery. Flashes with battery pre-alarm.

Handle for easy transport Infrared
For opera
Slide-in memory card unit
Power su

Multi-function-connector (MFC)*
Connecting for staff call, ambulances (12 V DC) and interface for fm anaesthesia/intensive.

 As of unit no. 20001. Previously separate connections for staff call and 12 V supply. Infrared interface For operation with fluid manager system.

Power supply For operation with fluid manager system.

Mains connection

Connection for power lead. Automatic switching to battery in the event of power failure. Mains fuses directly above mains connection.



P.O. 864: 48577, **DUBAI**, U.A.L. Tel: 04-267-8866, Faz: 04-267-0555 P.O. 864: 457, **SHARJAH**, U.A.F. Tel: 06-565-8866, Faz: 06-565-5683

مین ۱۹۵۸ کوی ایج به مقد ۱۳۱۰ ۱۸۵۰ ایدفاکس ۱۹۷۰ میکاد کی مین ۱۹۵۰ افغالهای ایج مفتد ۱۳۱۱ ۱۹۵۱ کاکس ۱۳۱۱ تا ۱۹۵۵ تا

E-mail: info@zulektahoso lats.com • Wabsite: www.zu akhahospitats.com



Operation

Start of infusion

- Ensure reliable installation
 Connect up staff call if appropriate.
- Switch on unit with ○/⊙. A short self-test is performed. Drive moves into position.
- Open syringe holder
- Insert syringe

Grip plates of syringe must be vertical and held securely by locator (see diagram). Close syringe holder.

Grip syringe

Keep key beneath << pressed. Drive advances and grips pressure plate of syringe, then release key. Type of syringe indicated must coincide with syringe inserted.

Prime

Press key beneath ON until infusion set has been primed (pressing key once = 1 ml). Then press key beneath END.

- Connect up to patient
- Set delivery rate

Values between 0.1 and 200 ml/h. Check display! Correction: Press C, enter rate again.

Choose additional settings as described below. For automatic rate calculation: Do not enter rate!

Press START

Infusion is implemented. Running symbol appears on display and green operating indicator lights.

Syringe change

To avoide incorrect dosing, always interrupt patient connection when changing syringe.

Press STOP
 Green operating indicator goes out. Close patient access.

Remove empty syringe
 Open syringe holder. Press key beneath >>,
 drive moves backwards.

 Insert new syringe
 Grasp plunger, vent and connect up to patient as described.

Press START

End of Infusion

Press STOP

Green operating indicator goes out. Close patient access.

Remove syringe

Open syringe holder. Press key beneath >>, drive moves backwards.

Switch off

Press O/@ for 2 seconds.



P.O. Box: 48577, **DUBAI**, U.A.L. Tel: 04 267 8865, Faz: 04 267 6555 P.O. Box: 457, **SHARJAH**, U.A.F. Tel: 06 565 8866, Faz: 06 565 6589

على دا ۱۳۸۸، يوچ از چې مقد د ۱۳۸۲، ۱۳۱۵ د فاکس ۱۳۱۷، ۱۳۸۸ مارد ۱۳۵۱، افغارفته از چې مفد ۱۳۵۱، ۱۳۵۱ د فاکس ۱۳۹۱، ۱۳۵۵، ۱۳۵۵،

E-mail: info@zulekt ahoso tats.com • Wabsite: www.zu akhahospitats com



Additional settings

To Change the Delivery Rate

- Press ŠTOP.
- Press C. Display is reset to 000.0.
- Enter new delivery rate.
- Press START. Infusion is implemented. (Alarm is given if there is no restart within 2 minutes)

To Change the Rate Without Interrupting the infusion (Function can be deactivated by our Service staff)

- Enter new rate.
- Press key beneath RATE. Rate is transferred to red display. Unit operates at new rate. (If new rate is not confirmed within 10 s, infusion continues at old rate)

Target Volume (Volume Pre-selection)
The target volume will be administered independent on the infused volume.

- Press key below VOL.
- Enter target volume via keypad and confirm with VOL (values between 0.1 and 999.9 ml). After confirming the display shows the residual volume instead of the target volume.

Note: When target-/residual volume has been administered, the pump stops and goes into alarm. Acknowledge alarm and press VOL. Clear displayed residual volume with C (in display appears ----,- ml). Confirm this with VOL or enter new target volume. To continue infusion,



the target volume has to be displayed as ---,ml or a new target volume has to be set.

Target Time (Time Pre-selection)

Press key beneath TIME.

Enter target time via keypad and confirm with TIME (50 min. = 5 0; 2 h/30 min. = 2 3 0). After confirming instead of the target time the residual time is displayed.

Correction: Press C. Display --h --m.
 New entry.

Note: When time has been expired, the pump stops and goes into alarm. Acknowledge alarm and press TIME. Clear displayed residual time with C (in display appears --h -- m). Confirm this with TIME or enter new target time.

Rate calculation Displayed delivery rate must be 000.0.

- Enter volume and time. The delivery rate is calculated automatically and displayed (rounded to one decimal place).
- Confirm RATE.
- Press START. Infusion is implemented.

Clear Time/Volume

- Press STOP, then key beneath VOL or TIME.
- Press C to clear.

1x: Target Vol/Time = ----,-ml / --h--m 2x: Infused Volume/Real Time = 0.0ml /00h00m

Status Request

Only when infusion is running.

- Press 1 x resp. 2 x key below INFO for actual values. The display disappears after 10 sec or after all information has been requested.
- Press x times key below INFO for displaying syringe type, battery capacity in h and min as well as hours of operation.

Set rate is automatically reduced if required for type of syringe being used.

Page 9 of 9