



P.O. Box: 48577, **DUBAI**, U.A.E.
Tel: 04 267 8866, Fax: 04 267 8855
P.O. Box: 457, **SHARJAH**, U.A.E.
Tel: 06 565 8866, Fax: 06 565 6699
E-mail: info@zulekha Hospitals.com • Website: www.zulekha Hospitals.com

ص.ب: ٤٨٥٧٧، دبي، إ.ع.م.
هاتف: ٠٤ ٢٦٧ ٨٨٦٦، فاكس: ٠٤ ٢٦٧ ٨٨٥٥
ص.ب: ٤٥٧، الشارقة، إ.ع.م.
هاتف: ٠٦ ٥٦٥ ٦٦٩٩، فاكس: ٠٦ ٥٦٥ ٦٦٩٩



OXYGEN FLOW METERS FOR CENTRALIZED OXYGEN SUPPLY

- Before attempting to connect the flow meter to the wall outlet make sure that the flow meter control knob is at the minimum or off position (clockwise)
- In order to plug in the flow meter to the wall outlet align the notch on the pin with the outlet and push the flow meter firmly till it click locks.
- In order to remove the flow meter from the wall outlet, press on the sides of the outlet, while holding the flow meter with the other hand.
- Always ensure that the water level in the humidifier bottle is between the upper and lower limits.
- For administering oxygen to the patient turn the knob counter clockwise and set the flow rate to required value (read center of ball).

